



TimberGlow

Wood Burning Sauna Heater

Installation Instructions

(Chimney Out The Top)



Requirements:

2 People (recommended)

Cordless Drill
Phillips & Robertson Drill Bits
2" hole Saw
Jig Saw
Carpenters Level

Tape Measure
Step Ladder
11mm Socket
13mm Socket

TimberGlow Wood Burning Sauna Heater Installation Instructions

(Chimney out the top)

**Congratulations on the purchase of your
Leisurecraft Timberglow wood burning sauna heater.**

Please read this entire manual before proceeding with installation.

Thank you for choosing Leisurecraft!

It is highly recommended to view the assembly video prior to starting assembly!

[Click here to View the assembly process or scan the QR code.](#)



Manufactured by:



tel: 888-923-9813 | info@leisurecraft.com | web: www.leisurecraft.com

TimberGlow

Wood Burning Sauna Heater

Installation Instructions

(Chimney out the top)



Before Starting the assembly of your TimberGlow wood heater, remove the protective film from the heater shield and floor plate.



Place the heat shield on the floor in the sauna where the stove will be.



Place the wall heat shield so the bottom is around 2" (51mm) from the floor of the sauna.



Ensure the heat shield is level and attach to the wall with 1 ½" (38mm) screws.

Manufactured by:



TimberGlow

Wood Burning Sauna Heater

Installation Instructions

(Chimney out the top)



Before Starting the assembly of your TimberGlow wood heater, remove the protective film from the heater shield and floor plate.



Place the heat shield on the floor in the sauna where the stove will be.



Bring the heater in and place it on top of the floor shield.

It should be 10" from the heat shield to the center of the hole on the stove.



At the top of the sauna, measure 11 $\frac{3}{4}$ " (30cm) and make a mark.

Measure 4" (10cm) in all directions from the center point.

Manufactured by:



TimberGlow

Wood Burning Sauna Heater

Installation Instructions

(Chimney out the top)



Use the chimney stack to trace out a circle around the marks made in the previous step.



Cut out the circle with a jig saw.



Place the shorter chimney connector piece onto the flange off the heater.



Place the longer chimney connector piece onto the short piece.

Manufactured by:



TimberGlow

Wood Burning Sauna Heater

Installation Instructions

(Chimney out the top)



Slide the bottom chimney stack through the roof hole and into the connector pipe.




On the top of the sauna, slide the rubber membrane over the chimney stack.

Mark the outline of the membrane.



Lift the membrane out of the way and apply the included roof sealant on the inside of the outline.

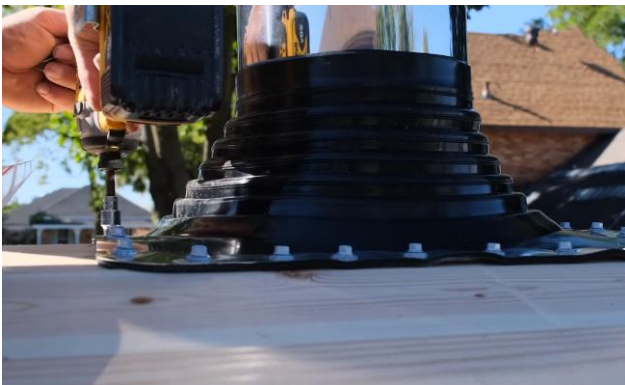

Slide the membrane back down and secure using the included self-sealing roofing screws every 1-2" (25mm to (51mm)

Manufactured by:



TimberGlow

Wood Burning Sauna Heater

Installation Instructions

(Chimney out the top)



Place the hose clamp over the membrane and tighten the screw.



Connect the 2nd insulated chimney piece onto the first.



Attach the support strap around the chimney pipes and tighten up.



Slide the chimney cap into the top stack and fold over the tab to secure it in place.

Manufactured by:



TimberGlow

Wood Burning Sauna Heater

Installation Instructions

(Chimney out the top)



Install the 2 halves of the chimney hole shield around the chimney on the inside to cover the hole and secure with 6 - 1 ½" (38mm) screws.



Place the rocks in the heater until they are 2" (51mm) above the top of the heater.

(It is recommended to wash the stones before placing in the heater to remove any dirt & debris)

Congratulations! Your installation is now complete.





WARRANTY

Dundalk LeisureCraft Inc. warrants our saunas against defects in materials and workmanship under normal/residential use for a period of five (5) years, as applicable, from the date of receipt of the product by the original end-user consumer. This warranty does not apply to normal wear and tear and/or natural weather conditions. This warranty does not cover regular required maintenance of the sauna, (eg. Tightening bands on the barrels, cleaning or staining the sauna) refer to your sauna assembly manual for maintenance guidelines. This warranty does not cover misuse or negligence, and the manufacturer and associated retailers are not liable for any injury or damage caused by the product. This warranty is a parts only warranty and any service or labor costs would not be considered as part of the 5-year warranty.

Purchaser Name: _____ Date: _____

Purchased From: _____

Manufactured by:



tel: 888-923-9813 | info@leisurecraft.com | web: www.leisurecraft.com